


# Hurricane®

**16" / 20" HIGH VELOCITY  
ORBITAL WALL / FLOOR FAN**

**Product**

**#HGC736491 • #HGC736492**

**OWNER'S MANUAL**

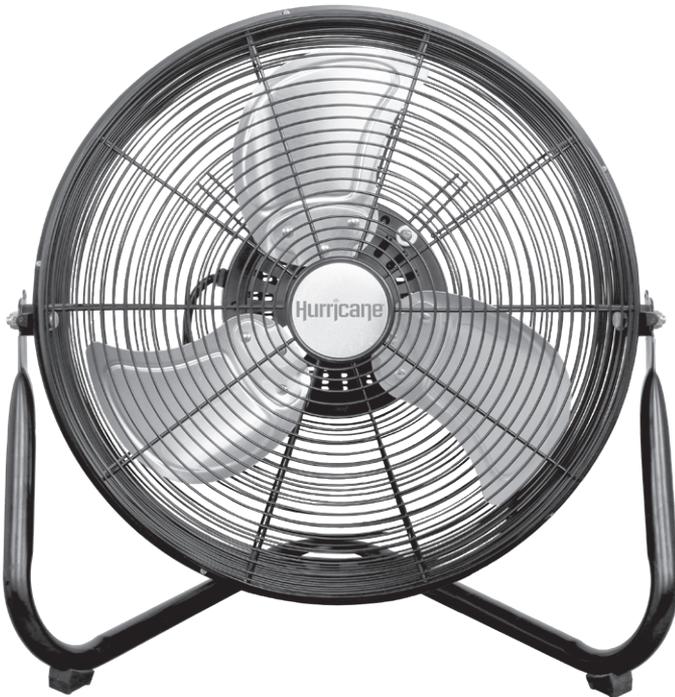

**ORBITAL**  
GEAR TECHNOLOGY

**READ AND SAVE THESE INSTRUCTIONS**

Note: Pictures in the manual are for reference only.

**HIGH VELOCITY**

## TECHNICAL SPECIFICATIONS

ITEM NO.	SIZE	VOLTS/Hz	CURRENT (A)	CFM	RPM
736491	16"	120V/60Hz	.7	3800	1400
736492	20"	120V/60Hz	.73	4500	1400

## CAUTION

Read instructions carefully for safe operation.

## SAFETY INFORMATION

### WARNING

1. Unplug the fan before moving it or performing maintenance.
2. DO NOT touch the fan when your hands are wet.
3. Those who are not qualified electricians should not disassemble, repair or rebuild the fan.
3. Unplug the fan when it is not in use.
4. DO NOT unplug the fan by holding the power cord. Unplug by holding the plug.
5. DO NOT use the fan when there is damage to the power cord or plug.
6. DO NOT use the fan with extension cord.
7. DO NOT use the fan close to fire.
8. DO NOT insert your hand or other objects into the guard or the movable parts.
9. To reduce the risk of fire or electric shock, do not use this fan with any solid-state speed control device.
10. If the power cord is damaged, it has to be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid hazard.
11. DO NOT use this fan outdoors.

### CAUTION

1. Unplug the fan from the outlet and clean it with a soft cloth.
2. DO NOT immerse the fan.
3. Fit the guard onto fan before starting up the fan.
4. This fan is not intended for use by people (including children) with reduced physical, sensory or mental capabilities or lack of experience and knowledge unless they have been given supervision or instruction concerning use of the fan by a person responsible for their safety. Supervise children to ensure they do not play with the fan.


## CARE AND MAINTENANCE

Unplug the appliance before cleaning. Don't use any water for cleaning metal surfaces. Slightly moisten a cloth and then wipe off the surfaces of the fan. In order to remove the dust from the grill, use a vacuum cleaner or remove the front grill by removing the securing screw on the edge of the grill with a screwdriver. After cleaning, remount the grill. After doing this, fasten the securing screw on the edge of the grill.

## ASSEMBLY INSTRUCTIONS

The fan is fully assembled. When you get from the package carton.


## OPERATING INSTRUCTIONS

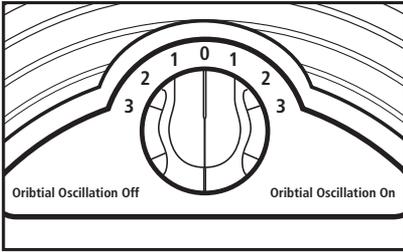

0 - Stop 1 - Low 2 - Medium 3 - High

1. Adjust air speed:  
Adjust the desired speed by rotating the switch knob.
2. Adjusting Internal Orbital Oscillation Feature:  
The internal orbital oscillation feature can be turned on by rotating the switch knob to the side labeled "Orbital Oscillation". To disengage the oscillation feature, turn the switch/knob to the side labeled "Orbital Oscillation Off".


## ORBITAL FEATURE

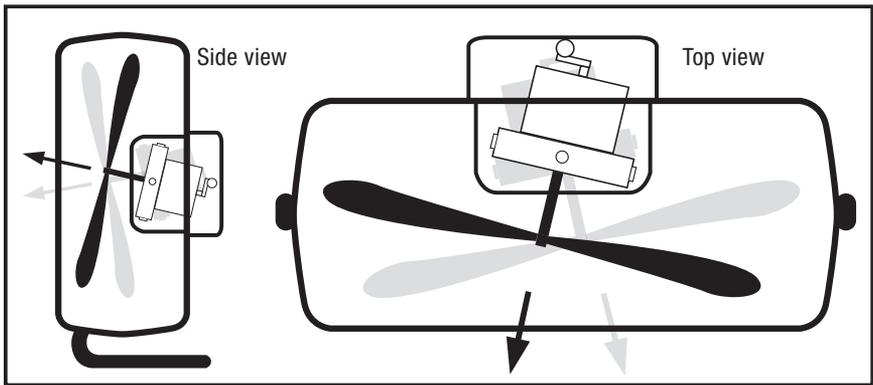

The rotor of the fan blade oscillates a full 360° allowing for maximum coverage in your space.

## WALL BRACKET INSTALLATION

1. Tighten Bolt into wall stud leaving gap for Wall Mount Bracket.
2. Place Wall Mount Bracket onto Bolt through the Key Way Slot.
3. Tighten Bolt further to secure Wall Mount Bracket.
4. Place fan onto Wall Mount Bracket.
5. Insert and tighten Philips Head Screw to secure the fan onto the Wall Mount Bracket.

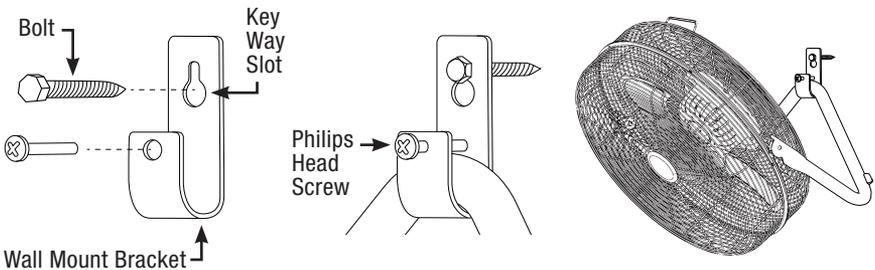

# Hurricane®

**16" / 20" HIGH VELOCITY  
METAL DRUM FAN**

**PRODUCT  
#HGC736491  
#HGC736492**

**FOR MORE INFORMATION VISIT:  
[www.hurricane-fans.com](http://www.hurricane-fans.com)**



**HAWTHORNE GARDENING™**

co

Exclusively distributed by Hawthorne Hydroponics LLC,  
a subsidiary of The Hawthorne Gardening Company,  
3204 NW 38th Circle, Vancouver, WA 98660  
**HawthorneGC.com | Canada: HawthorneGC.ca**  
©2020. World rights reserved.