Hurricane®

SUPREME

18" OSCILLATING STAND FAN W/ REMOTE

OWNER'S MANUAL

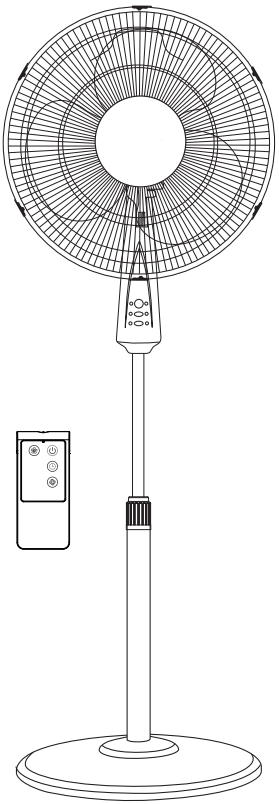

READ AND SAVE THESE INSTRUCTIONS

Note: Pictures in the manual are for reference only.

CAUTION

Read rules for safe operation and instructions carefully.

WARNING

1. This appliance has a polarized plug (one blade is wider than the other). To reduce the risk of electric shock, this plug is intended to fit in a polarized outlet only one way. If plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. DO NOT attempt to defeat this safely feature.
2. To reduce the risk of fire or electric shock, DO NOT use this fan with any solid state speed control device.

RULES FOR SAFE OPERATION

1. Never insert fingers, pencils, or any other object through the grill when fan is running.
2. Disconnect fan when moving from one location to another.
3. Disconnect fan when removing grills for cleaning.
4. Be sure fan is on a stable surface when operating to avoid overturning.
5. DO NOT use fan in window. Rain may create electrical hazard.
6. Ensure that the fan is switched off from the supply mains before removing the grill.

THE RULES ABOUT CORD AND PLUG AS BELOW:

1. This product employs overload protection (fuse). A blown fuse indicates an overload or short-circuit situation. If the fuse blows, unplug the product from the outlet. Replace the fuse as per the user servicing instructions (follow product marking for proper fuse rating) and check the products. If the replacement fuse blows, a short-circuit may be present and the product should be discarded or returned to an authorized service facility for examination and/or repair.
2. DO NOT operate any fan with a damaged cord or plug. Discard fan or return to an authorized service facility for examination and/or repair.
3. DO NOT run cord under carpeting. DO NOT cover cord with throw rugs, runners, or similar coverings. Do not route cord under furniture or appliances. Arrange cord away from traffic area and where it will not be tripped over. coverings. DO NOT route cord under furniture or appliances. Arrange cord away from traffic area and where it will be tripped over.

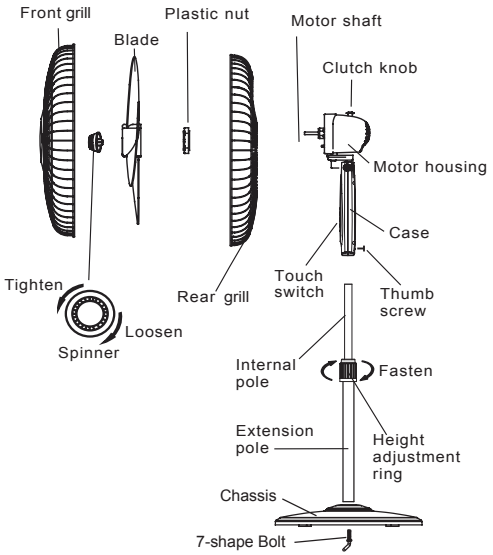

NOTE: Any discrepancy between the real object and the illustration in the drawing shall be subject to the real object.

ASSEMBLY OF CHASSIS & COLUMN UNIT

1. Unscrew the 7-shape Bolt from the Extension Pole. (Fig.1)
2. Insert the extension pole into the chassis and tighten the 7-shape Bolt (Fig.2)
3. From the extension pole loosen the height adjustment ring and adjust the internal pole to the desired height. (Note: If you can't find the internal pole, it must inside the extension pole. You can pull it out from the extension pole.) (Fig.3)
4. To attach the head unit to the internal pole, loosen the thumb screw on the bottom of the head unit. Place the head unit on the internal pole and tighten the thumb screw in alignment with the groove on the internal pole. (Fig.4)

CAUTION: Height adjustment ring must be fully fastened before the assembly of the motor section to the internal pole.

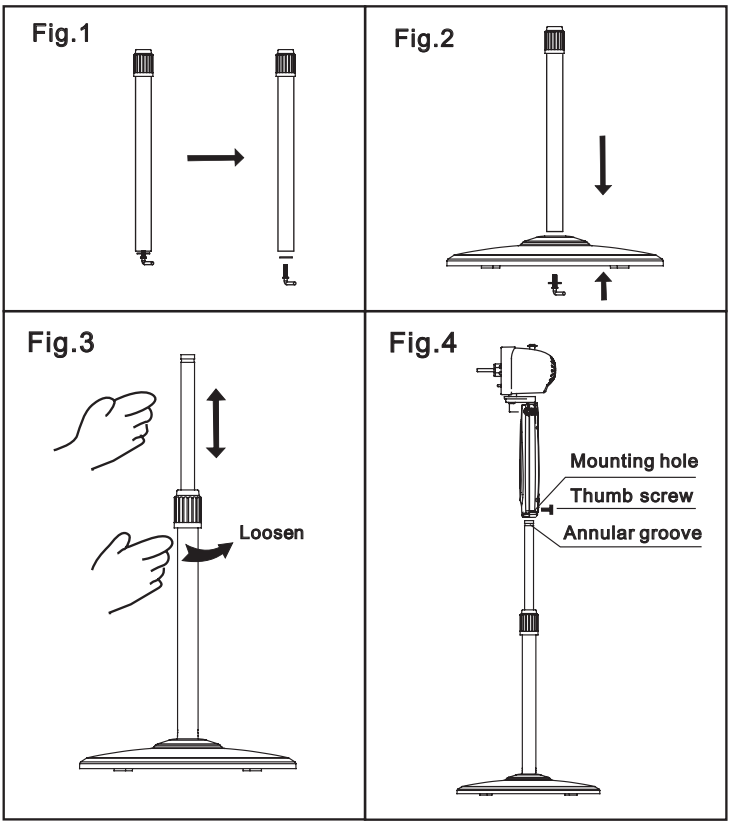

GRILL & FAN BLADE ASSEMBLY

1. Unscrew the spinner clockwise (or take the spinner out from the bag) and the plastic nut counterclockwise to remove both of them. Fix the rear grill to the motor then tighten the plastic nut again. (Fig. 5)
2. Insert the blade into shaft, and make sure the rotor shaft pin is fitted into groove of the blade. Turn the spinner counterclockwise to tighten the blade. (Fig. 6)
3. Fasten the front grill and the rear grill by the grill clip. (Fig. 7)

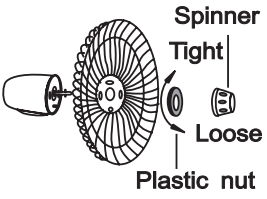

Fig.5

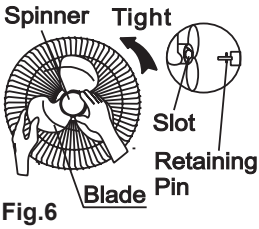

Fig.6

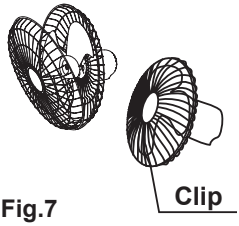

Fig.7

OPERATING INSTRUCTIONS

I. REMOTE CONTROLLER (Fig.8)

"⏻" ON/OFF Button

The button is for switching on the fan. The fan will be started at low speed. Press the button again, the fan will work at middle speed. Once again, it will work at the maximum speed. Once again, it will be switched off.

"🕒" TIMER Button

When this button is touched repeatedly, the time to be set 1, 2 and 4 hours and the correspond pilot lamp will light. If the lamp don't light after you touched the button, the fan will run continuously.

"❀" SPEED Button

After the fan has started, this button serves as a speed selector in the sequence from "low-medium-high-low" when this button being touched repeated or continuously.

"🌀" MODE Button

Press this button to select mode. This button is a selector button for wind type. The wind type changes in the sequence from NORMAL---NATURAL---NORMAL wind when this button being touched repeatedly or kept in.

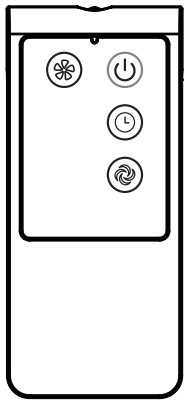
Fig.8

II. CONTROL PANEL (Fig.9)

These buttons of the control panel may be used as same as of the remote controller.

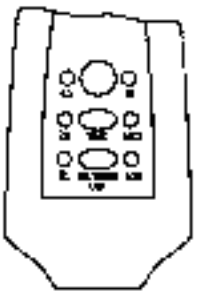
Fig.9

II. OSCILLATION CONTROL

To make the fan oscillate, press the clutch knob located on the top of the motor housing. To get the directional airflow, pull the clutch knob up to its initial position.

III. TILT ADJUSTMENT

To adjust the air flow upward or downward, push the grills lightly to the desired direction.

IV. HEIGHT ADJUSTMENT

The height of the fan can be adjusted by loosening the height adjustment ring, carefully raising or lowering the fan and firmly re-tightening the height adjustment ring.

BATTERY INSTALLATION

NOTE: Batteries not included.

1. Press down on the battery compartment cover and slide it out.
2. Insert the batteries, making sure that the positive terminals are facing the proper way.
3. Replace the cover.

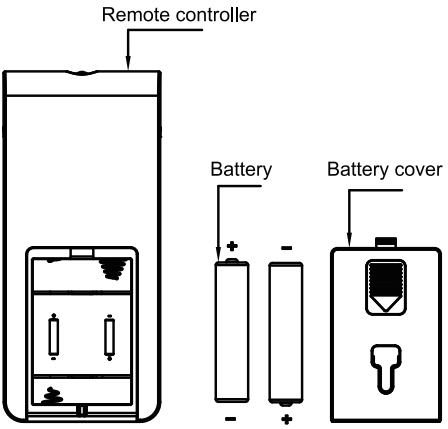

BATTERY WARNING AS BELOW

1. “DO NOT dispose of batteries in fire, batteries may explode or leak.”
2. DO NOT mix old and new batteries.
3. DO NOT mix alkaline, standard (carbon-zinc) or rechargeable (nickel-cadmium) batteries.

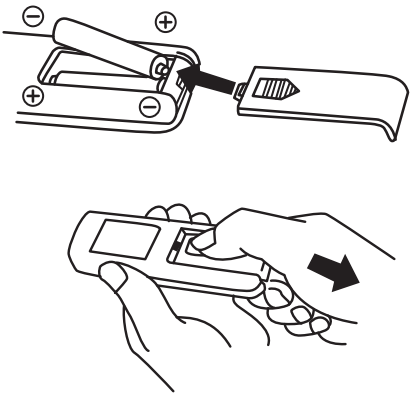

HOW TO USE THE REMOTE CONTROLLER CORRECTLY

Point the remote controller at the receptor on body of the fan and press the desired button. The remote controller will work at distances of up to roughly 5 meters/16 feet, and at an angle of 30 degrees included between right and left from the receptor.

NOTE: The batteries must be removed from the remote controller before it is scrapped and that they are disposed of safely.

OVERHEAT PROTECTION OF THE MOTOR

The windings of the motor have a thermal-fuse that burns out and the fan switches off and temperature of the motor is no longer going up so that plastic parts of the fan don’t subject to deformation so far so to be burned by the overheat if the motor is overheat for any unexpected reason.

USER SERVICING INSTRUCTIONS

a) Grasp plug and remove from the receptacle or other outlet device. DO NOT unplug by pulling on cord.
b) Open fuse cover. Slide open fuse access cover on top of attachment plug towards blades.
c) Remove fuse carefully. Insert the tip of your tool into fuse slot (close with the terminal), then prize the fuse gradually and slowly, but not overexert. If you feel tight, you can try it at several times and prize the fuse little by little. When one side of the fuse has been prized, then you can get the fuse out entirely.
d) Risk of fire. Replace fuse only with 2.5 Amp, 125 Volt fuse.
e) Close fuse cover. Slide closed the fuse access cover on top of attachment plug.
f) Risk of fire. DO NOT replace attachment plug. Contains a safety device (fuse) that should not be removed. Discard product if the attachment plug is damaged.

NOTICE:

1. When you replace the fuse, please don't operate suddenly or overexert, or else the product will be damage or cause accident.
2. When you feel it hard to be operated, please make sure you have got the right way.

NOTES

Hurricane®

18" OSCILLATING STAND FAN W/ REMOTE

PARTS
#736547
#736548

Use a "QR Code App" on your smart phone to access our website and browse our entire product offering or go to"

www.hurricane-fans.com

Exclusively distributed by:

Sunlight Supply® Inc.

SunlightSupply.com