



## SURE TEST® BASE QUICK START GUIDE

### WELCOME

Thank you for purchasing the Sure Test® Base. This Base is powered by a 110V power supply, it forwards data from all your media sensors to the cloud seamlessly. The connection to the cloud uses a cellular connection (no monthly charge for basic data).

### PACKAGE CONTENTS

This package contains the Base. The Base comes in an enclosure as shown to the right.



The Base comes pre-equipped with:

- a 110V power supply and
- a cellular modem as shown below.





## SEE BACK FOR CONNECTING THE BASE

Exclusively distributed by:  Sunlight Supply, Inc. [www.SunlightSupply.com](http://www.SunlightSupply.com) • 1 888-808-4826

## CONNECTING THE BASE

- Step 1: Safely mount the Base as high as is possible. Use screws to mount the Base if you need to. To maximize the range between the Base and the sensors, mount the Base vertically as shown on the right. In addition, if feasible, ensure that the front of the Base with the label is facing the direction where the Stem and sensors will be deployed.
- Step 2: Plug in the Base to a 110V power outlet.
- Step 3: Inspect the cellular modem and ensure that the light is a solid blue. This indicates that it is connected and working. If it is not solid blue you may have to move the modem to an area that has better cellular reception.

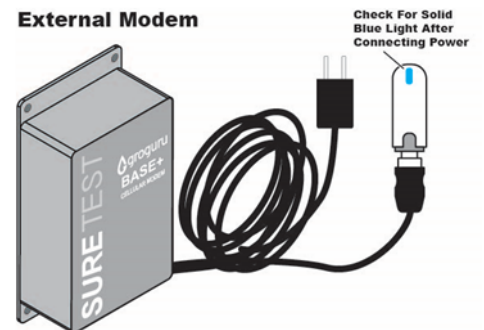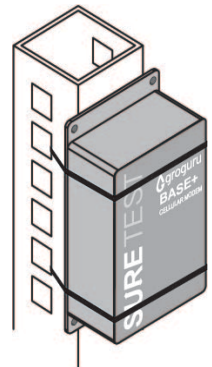

- Step 4: Ensure that the cellular modem is mounted safely and securely so that it is protected from the moisture.

## ADDITIONAL INFORMATION

This Sure Test® Gro Guru can provide an optional subscription that enables you access to historical data, alerts and ability to change configuration. Please check out [www.groguru.com/docs](http://www.groguru.com/docs) for more details. Steps for accessing data are also given in the documents at this location.

Please contact [support@gro.guru](mailto:support@gro.guru) for any hardware or software related questions.

Exclusively distributed by:  Sunlight Supply Inc. [www.SunlightSupply.com](http://www.SunlightSupply.com) • 1888-808-4826